

PRYMEBLU BTH-500-KU Wireless Speaker Microphone

For use with Android and Apple iOS smart devices using the AT&T ePTT app



Model No. BTH-500-KU
Made in Taiwan

PRYME and PRYMEBLU® are trademarks owned by PRYME Radio Products, Brea CA. All other product or service names are the property of their respective owners. © 2021 PRYME Radio Products, Brea CA. All Rights Reserved

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment uses radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. To maintain compliance with FCC RF exposure compliance requirements, please avoid direct contact to the transmitting antenna during transmitting.

RF Exposure Warning!

This device contains transmitters and receivers which emit Radio Frequency (RF) energy. The device is designed to comply with the limits for exposure to RF energy set by the Federal Communications Commission (FCC) of the United States, Industry Canada (IC) of Canada, and the regulating entities of other countries.

If you are still concerned about exposure to RF energy, you can further limit your exposure by limiting the amount of time you use the equipment, by placing the equipment in a bag or container, and by increasing the distance between you and the device, since exposure level drops off dramatically with distance.

911 Mariner St., Brea, CA 92821
PH: 714.257.0300 FAX: 714.257.0500
TOLL FREE: 800.666.2654
WWW.PRYME.COM

1.00.KU March 2021

Charging the Speaker Microphone

The BTH-500-KU speaker microphone has a replaceable Lithium Ion rechargeable battery pack which must be charged prior to operation, and must be recharged regularly. A fully charged battery will provide up to 40 hours of continuous operation before needing to be recharged. However, operating time can vary depending on usage and the condition of the battery pack. Recharge the battery regularly.



To charge the speaker microphone

1. Ensure the device is turned off using the multifunction button.
2. Plug the charge cable into any powered USB outlet, such as an AC wall charger, and then into the charge jack on the speaker microphone.
3. Once the charging process has begun, the LED indicator on the bottom of the speaker microphone will show a constant red light.
4. Typical charge time is approximately five hours. Actual charge time will vary depending on several factors including the battery's charge state, condition, and age.
5. When the battery is fully charged the LED indicator on the speaker microphone will turn off.
6. Disconnect the charger from the adapter when charging is completed.

Charging Cautions:

- Do not use a wall charger or charge cable that appears to be damaged. (Example: frayed wires, melted plastic, etc.) Contact PRYME to get a new manufacturer-approved replacement charger.
- Do not tamper with or modify the speaker microphone or charger.
- Always turn the speaker microphone off when charging.

Controls and Connection

Volume Control/Power Knob
This knob allows you to turn the BTH-500-KU microphone on and off and to adjust the volume of received calls.

Earphone Jack
This jack is used to connect an optional, wired listen-only earphone to the speaker microphone for enhanced privacy.

Phone Button
This button is used to answer or hang up telephone calls when the BTH-500-KU is connected to a cellphone.

Status LEDs
The red and blue LEDs flash messages that let the user know the current status of the speaker microphone.

PTT Button
This button is used to activate the push-to-talk feature of the 2-way radio.

Front Firing Speaker
Received calls are heard over this speaker. The volume level can be controlled using either the Volume/Power Knob buttons on the speaker microphone, or by using the volume controls on the two-way radio or phone.

Microphone
This microphone picks up the user's voice audio when sending a call.

Replaceable Clothing Clip
The alligator-type clip secures the speaker microphone to the user's clothing during use. The clip can be rotated to allow the microphone to be better positioned.

Charge Jack
This mini-USB jack is used to recharge the removable battery of the speaker microphone by connecting the BTH-500-KU to a USB charger or any powered USB source.

PAIRING THE BTH-500-KU SPEAKER MICROPHONE WITH A CELL PHONE

The BTH-500-KU speaker microphone is designed to work with smart devices running either the Android or Apple iOS operating systems. Prior to normal operation, the phone and speaker microphone must be paired together using the following process (note the process for iOS and Android are different)



To pair the BTH-500-KU speaker microphone with an Android phone:

1. When pairing the speaker microphone with an Android phone, first make sure that the BTH-500-KU and all other nearby BT devices are powered off before beginning.
2. Press and hold down the PTT Button on the BTH-500-KU while turning the microphone on with the Power/Volume Knob. Continue to hold the PTT Button down, until the LED on the speaker microphone flashes RED-BLUE-RED-BLUE continuously in sequence. The BTH-500-KU speaker microphone is now in pairing mode.
3. Activate the BT feature on your phone.
4. Activate the "scan/discover new BT devices" feature on the phone. The exact steps needed to do this will vary depending on the brand/model of phone you are using.
5. Select the PRYMEBLU BTH-500-PTT from the list of BT devices shown on your phone. If the phone asks for a passcode, enter "0000". The phone may also prompt you to confirm the connection.
6. After a few seconds, the two devices should sync to one another. Once the PRYMEBLU speaker microphone and phone are paired with each other, the status LED on the microphone will revert back to a single blue flash every few seconds.
7. Once successfully paired, you will be able to make and receive phone calls using the PRYMEBLU BTH-500-KU speaker microphone.

PAIRING THE BTH-500-KU SPEAKER MICROPHONE WITH A CELL PHONE *continued*



To pair the BTH-500-KU speaker microphone with an Apple iOS phone:

1. When pairing the speaker microphone with a Apple iOS phone, first make sure that the BTH-500-KU and all other nearby BT devices are powered off before beginning.
2. Press and hold down the Power Button on the BTH-500-KU for five seconds, until the LED on the speaker microphone flashes RED-BLUE-RED-BLUE continuously in sequence. The BTH-500-KU speaker microphone is now in pairing mode.
3. Activate the BT feature on your phone.
4. In the phone's BT list, two devices will be found, "BTH-500-PTT" and "PTT-U." Both of these BT devices must be paired to the phone for the BTH-500-KU's audio and push-to-talk features to work.
5. Tap on "BTH-500-PTT" to pair the phone with the BT audio. If the phone asks for a passcode, enter "0000". The phone may also prompt you to confirm the connection.
6. After a few seconds, the two devices should synch to one another. Once the PRYMEBLU speaker microphone and phone are paired with each other, the status LED on the microphone will revert back to a single blue flash every few seconds.
7. Tap on "PTT-U" to pair the phone with the push-to-talk connection. The phone may also prompt you to confirm the connection.
8. Once successfully paired, you will be able to make and receive phone calls using the PRYMEBLU BTH-500-KU speaker microphone.

Reconnecting a Previously Paired Speaker Microphone and Radio Adapter/cellphone

Once the PRYMEBLU BTH-500-KU speaker microphone and cellphone have been successfully paired together, both devices will remember that connection. The speaker microphone and phone will attempt to reestablish their link whenever they are both powered on and in within range of each other. Re-establishing this connection can take 10-60 seconds.

OPTIONAL EAPRPHONES

Although the BTH-500-KU has a built-in speaker for listening to received calls, some users may prefer to use a listen only earphone for enhanced privacy. The accessory jack on the speaker microphone will accept any mono earphone with a 3.5 mm audio plug. When an earphone is used, the front-firing speaker is disabled.

PRYME EH-289XB model shown.
Earphone sold separately.



PRYME makes a variety of listen-only earphones in different styles that will work with the BTH-500-KU.

Model	Style	Cable Length/Type	Connector
EH-289XB	Earbud	24" Straight Flat Cable	3.5mm right angle
EH-389SC	Rubber Ear Hook	15" Coiled	3.5mm right angle
EH-389XC	Rubber Ear Hook	25" Coiled	3.5mm right angle
EH-1289SC	Plastic D-Ring	15" Coiled	3.5mm right angle
EH-1289XC	Plastic D-Ring	25" Coiled	3.5mm right angle
EH-1389SC	Acoustic Tube	15" Coiled	3.5mm right angle
EH-1389XC	Acoustic Tube	30" Straight	3.5mm right angle
EH-1399X	Acoustic Tube	30" Straight	3.5mm right straight
EH-GH89-SC	G-Hook (swivel)	10" Coiled	3.5mm right angle

SPECIFICATIONS

BT Version:	v3.0+EDR, BTLE
Speaker Output:	1 watt
Receiver Sensitivity:	-82 dBm (typ.)
Power Class:	BT class 2
Range:	10 meters
Display:	Blue and Red
BT Profile:	HSP, HFP, A2DP, AVRCP, SPP
Operating Voltage:	5 VDC
Battery Capacity:	1,020 mAh
Operating Time (Standby):	> 30 days
Operating Time (Typical):	> 80 hours
Operating Time (Continuous Talk):	> 40 hours
Push-to-Talk Function:	Built-in
Operating Temperature:	-70°F to +120°F (approx.)

Setting up AT&T Enhanced PTT

To get the AT&T ePTT app on your phone and set it up to work with the BTH-500-KU's speaker microphone do the following:

1. Install the AT&T ePTT app onto your phone using the Google Play Store
2. Launch the AT&T ePTT app.
3. Accept the End User License Agreement for the app.
4. When prompted, select "Yes" to activate the app.
5. Log in with your AT&T account.



Using the Speaker Microphone with AT&T ePTT

Once setup, you will be able to use the speaker microphone with the AT&T ePTT app, even if ePTT is running the background.

- To activate ePTT's push-to-talk feature, press and hold the PTT button on the speaker microphone.
- When ePTT is transmitting a call, audio will be picked up by the BTH-500-KU's built-in microphone unless a wired accessory with a built-in microphone is plugged into the speaker microphone. In that case, the accessory microphone will be used instead.
- Incoming calls received by ePTT will be heard over the earphone that is plugged into the BTH-500-KU's accessory port.

Making and Receiving Phone Calls

You can also use the speaker microphone to make and receive phone calls.

- You can initiate a phone call by using the Phone Dialer app in the phone.
- Phone audio will be routed to the BTH-500-KU's accessory port and microphone.
- To answer an incoming call, press the phone button on the speaker microphone.
- While on a call, you can press the phone button on the speaker microphone to hang up the phone and end the call.

Phone functions are provided by using the BTH-500-KU's Phone Button.

Call State	Button Press	Function
Incoming call	Press Phone Button once	Answer call
Incoming call	Press and hold Phone Button for 5 seconds	Reject call
On a call	Press Phone Button once	Hang up call
No call	Long press Phone Button	Activate voice dialer

STATUS LED MESSAGES

The meanings of the various status LED messages shown by the speaker microphone are shown on the following table:

LED INDICATION	MEANING
Constant Red (while plugged into charger)	Charge mode
No indication (while plugged into charger)	Charging is finished
Flashes red-blue-red-blue repeatedly	Pairing mode
Two blue flashes every two seconds	Speaker microphone is powered on but not paired
Three blue flashes every two seconds	Speaker microphone is powered and paired
Constant red with one blue flash every two seconds	PTT is pressed
No indication	Speaker microphone is powered off

SUPPORT AND WARRANTY

PRYME Radio Products warrants this product against defects in materials or workmanship for a period of one year from the date of retail purchase. PRYME will repair or replace a defective unit, at our option, without charge for parts or labor. The limited warranty is extended only to the original purchaser and is valid only to consumers in the United States and Canada. It does not cover damage or failure caused by or attributable to Acts of God, abuse, misuse, improper or abnormal usage, faulty installation, improper maintenance, lightning, or other incidences of excessive voltage, or any tampering or repairs by other than a PRYME authorized repair facility. It does not cover replacement of consumable parts, transportation costs, or damage in transit.

Repair or replacement under the terms of this warranty does not extend the terms of this warranty. This warranty can only be modified by an officer of PRYME Radio Products, and then only in writing. Should this product prove defective in workmanship or material, the consumer's sole remedies shall be such repair or replacement as provided by the terms of this warranty. Under no circumstances shall PRYME Radio Products be liable for any loss or damage, direct, consequential, or incidental, arising out of the use of or inability to use this product. Some states do not allow limitations on how long an implied warranty lasts or the exclusions or limitations of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights. You may also have other rights, which may vary, from state to state.

For support or warranty service on your PRYME product, contact us at 1-800-666-2654 or visit us on the web at www.PRYME.com.

COPYRIGHT AND TRADEMARK INFO

© 2021 PRYME Radio Products, Brea CA. All rights reserved.

PRYME® and PRYMEBLU® are trademarks owned by PRYME Radio Products, Brea CA.

Android is a trademark of Google Inc.

Apple is a trademark of Apple Inc.

iOS is a trademark of Cisco Systems and is used by Apple Inc. under license.

AT&T is a trademark of AT&T Intellectual Property and/or AT&T allied companies.

All other product or service names are the property of their respective owners.

DISCLAIMER: The BT wireless link used by PRYMEBLU products is an open standard, unsecured technology. As such, it is not recommended for first-responder or other mission critical users.