


PRYME®


How to use the SPM-2200 TrooperII® Microphone

The PRYME SPM-2200 TROOPER II® microphone uses a special NOISE-CANCELING microphone which is designed to help filter out ambient background noise. When you press the PTT (Push-to-Talk) button on the SPM-2200, the FRONT MIC INPUT of the microphone picks up the sound of your voice, which is transmitted over the air. The AMBIENT NOISE PICKUP on the rear of the unit picks up nearby sounds, which are filtered out of the transmitted signal.

Ambient Noise Pickup

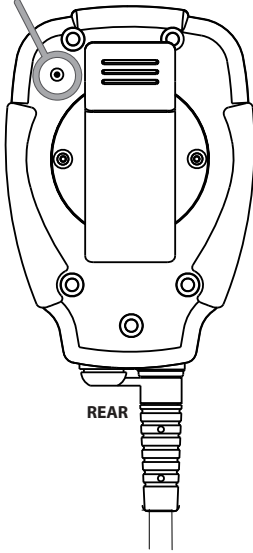

Front Mic Input

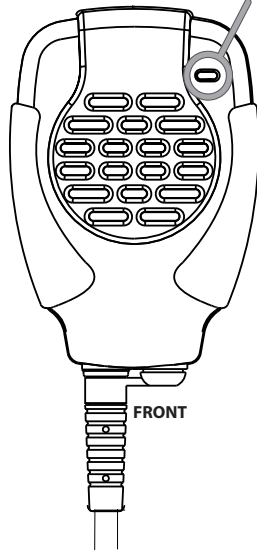

For best audio clarity, when using this microphone you should **hold the microphone directly in front of your mouth, at a very close distance of approximately 1 inch (3 cm), and speak directly into the front-facing microphone input.**



DO NOT side-talk into the microphone.

For users who prefer to side-talk their microphone and do not require the noise-canceling feature, we recommend the original PRYME SPM-2100 Trooper series speaker microphone.



DO NOT hold the microphone more than 2 inches (5 cm) away from your face.



CAUTION: Holding the microphone too far away from your mouth or speaking indirectly into the microphone can result in low or distorted transmissions, which can be difficult for the receiving party to understand.

COPYRIGHT and TRADEMARK INFO

© 2018 PRYME Radio Products, Brea CA. All rights reserved.

All other product or service names are the property of their respective owners.

Version 1.00 AUGUST 2016

PRYME[®]

911 Mariner St., Brea, CA 92821
PH: 714.257.0300 FAX: 714.257.0600
TOLL FREE: 800.666.2654
WWW.PRYME.COM